



Petrolux oil lamp 650106 & 650107 assembly instructions

February 2008


• Design: Peter Seidelin Jessen

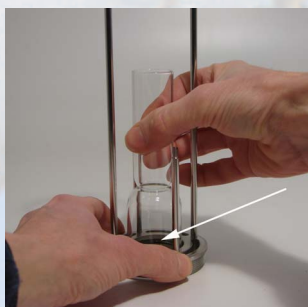


Inserting the chimney.
Press and twist at the same time the chimney into the o-ring (arrow).

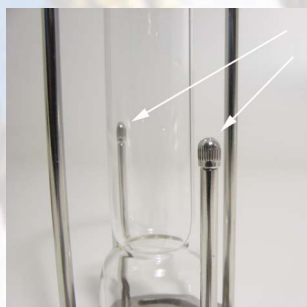

Remove the 2 finger screws.

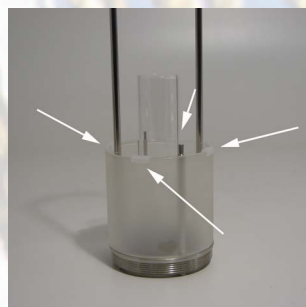


Mounting the outer glass.
Be sure to mount the 4 pieces of plastic-supports as shown (arrows).

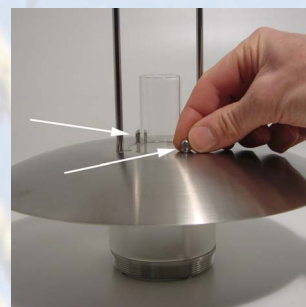


Mounting the shade.
Slide down the shade along the handle-bars until it rests on the plastic-supports on the glass tube. Screw on again the 2 finger screws.



Inserting the smoke bell I.
Press it gently together and snap it into the shade. Make sure it snaps into position!

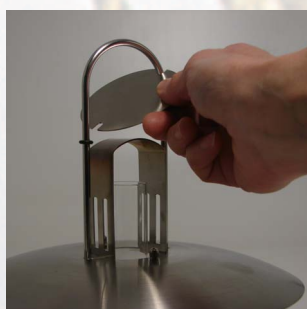

Inserting the smoke bell II. Pull down the 2 small o-rings along the handlebars to give room for the smoke bell. Insert the smoke bell in between the bars and let it rest on the 2 o-rings.

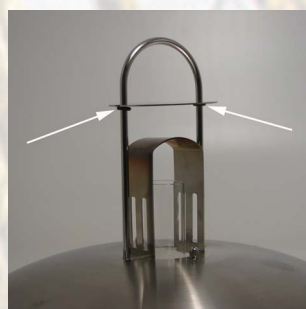

Positioning the smoke bell II.
Pull up the 2 small o-rings until the smoke bell is positioned as shown (arrows).



Filling lamp oil into the lamp.
Fill up to approx. 2 cm from edge.



Lighting the lamp.
Please wait half an hour before lighting giving the wick time to absorb the lamp oil.



Unscrew here when lighting the lamp.

Unscrew here when filling her up with lamp oil.

Design registration: DR 2007 00052



The lit oil lamp.
Enjoy the comfortable and calming light from the oil lamp.

You put out the oil lamp by blowing out the flame. Blow on the slant into the top of the chimney.



Petrolux was nominated on the METS exhibition 2007 in Amsterdam with a "special mention":
This stainless steel lamp had a very elegant and beautiful line. "A good modern interpretation of a classic design," said Bill Dixon, chairman of the jury.